

INDEX

A

- Air filter air box 185-187
- Alternator AC sensor line 200-201
- Alternator, pulse generator
and starter clutch. 109-112, 193
- Axle, front drive 253-260
- Axle, rear. 273-277

B

- Battery. 39-41
- Brakes 291-320
 - bleeding the system 318-320
 - brake cable replacement 309-311
 - brake, front 291-301
 - brake hose replacement 314-318
 - master cylinder 311-314
 - rear drum brake. 301-309

C

- Camshaft chain tensioner 97
- Capacitor discharge ignition. 195-196
- Carburetor 167-181
 - adjustments. 176-181
 - cleaning and inspection 174-175
 - dissassembly/assembly. 170-173
 - removal/installation 168-170
 - service. 167-168
- Charging system 190-193
- Clutch lifting mechanism 141-144
- Clutch, centrifugal 133-137
- Clutch, manual 137-141
 - inspection 139-141
- Clutch operation 132-133
- Crankcase and crankshaft. 122-127
- Crankcase breather system (U.S. models) 39
- Crankcase cover, left-hand 120-122
- Crankcase cover, right-hand 117-120
- Cylinder 94-96
- Cylinder head 85-86
- Cylinder head cover 77, 81-85

D

- Diode. 215
- Drive shaft, side 265-266

E

- Engine. 72-128
 - alternator, pulse generator and
starter clutch. 109-112
 - break-in procedure, engine. 127-128
 - camshaft 77-80, 83-85
 - camshaft chain tensioner 97
 - crankcase and crankshaft 122-127
 - cylinder. 94-96
 - cylinder head 85-86
 - kickstarter. 113-117
 - oil pump and primary drive gear 103-106
 - piston, piston pin and piston rings 97-103
 - principles, engine 72
 - service and adjustment. 128
 - start reduction gears 106-108
 - valves and valve components. 86-94
- Exhaust system 187-188
- External shift mechanism. 147-151

F

- Fasteners 7-11
- Fender, front 324-327
- Fender, rear 328
- Final drive unit 277-281
- Front differential and propeller shaft 261-265
- Fuel shutoff valve 183-185
- Fuel tank 185
- Fuses 217

G

- Gear case, front. 266-270

H

- Handlebar 227-231
- High oil temperature warning
indicator system 212-215

- Hub and brake drum, front 223-227
- 2-wheel drive 223-226
- 4-wheel drive 226-227

I

- Ignition coil 196-197
- Ignition pulse generator 198-199

K

- Kickstarter 113-117

L

- Lighting system 208-212
 - brakelight 211
 - headlight 208-210
 - indicator lights 212
 - taillight 210-211
- Lubricants 11
- Lubrication, periodic 41-48
 - control cables 47-48
 - engine oil and filter change 42-44
 - engine oil filter screen cleaning 44-45
 - engine oil level check 41-42
 - final drive unit 46-47
 - front differential (4-wheel drive) 45-46
 - miscellaneous lubrication points 48
 - steering shaft holder bearing 48
- Luggage carrier, front 322-324
- Luggage carrier, rear 327

M

- Maintenance, periodic 48
 - air filter element cleaning 53-55
 - axle boot inspection, front drive
 - (4-wheel drive) 53
 - brake adjustment, front 49-50
 - brake adjustment, rear 50
 - brake fluid change, hydraulic 51-52
 - brake fluid level, hydraulic 51
 - brake lines, hydraulic 51
 - brake lining inspection, front 48-49
 - brake lining inspection, rear 49
 - choke valve 56-57
 - clutch mechanism adjustment 52
 - fasteners 60
 - front wheel toe-in adjustment 58
 - fuel line inspection 55
 - fuel shutoff valve and filter
 - removal/installation 56

- fuel strainer cleaning 55
- rear suspension check 59-60
- reverse lock mechanism 53
- skid plates 60
- spark arrestor cleaning 57
- steering system and
 - front suspension inspection 58
 - throttle lever adjustment 52-53
 - wheel bearings 58
- Master cylinder 311-314

O

- Oil pump and primary drive gear 103-106
- Output gear case 163

P

- Parts replacement 12-13
- Piston, piston pin and piston rings 97-103
- Pre-checks 37-38

R

- Reverse lock mechanism 144-145

S

- Safety 2-3, 21-24
- Service 3-5
- Service intervals 38
- Shock absorber 245-251, 281-282
- Starter 201-207
 - assembly 206-207
 - disassembly 203-204
 - inspection 202-206
 - removal/installation 201-202
- Starter reduction gears 106-108
- Starter solenoid 207-208
- Starting system 201
- Steering knuckle 236-242
 - 1988-1992 2-wheel drive 236-237
 - 4-wheel drive and
 - 1993-on 2-wheel drive 237-242
- Steering shaft 231-233
- Supplies, expendable 11-12
- Suspension, front A-arms 242-245
 - 1988-1992 2-wheel drive 242
 - 4-wheel drive and
 - 1993-on 2-wheel drive 242-245
- Swing arm 282-289
 - disassembly/inspection/assembly 284-288
 - installation 288-289

removal 283-284
Switches 215-217

T

Throttle cable replacement 182-183
Tie rod 233-236
Tires and wheels 38, 220-223
Tools, basic hand 13-17
Tools, precision measuring 17-20
Tools, special 20
Torque specifications 6-7
Transmission and
 internal shift mechanism 151-162
 assembly/installation 155-159
 internal shift mechanism inspection 160-162
 removal and disassembly 152-155

Transmission inspection 159-160
Tune-up, engine 60-68
 carburetor idle mixture 67
 compression test 65
 idle speed adjustment 68
 ignition timing 65-67
 spark plug 62-65
 valve clearance adjustment 61-62

V

Valves and valve components 86-94
Voltage regulator/rectifier 193-195

W

Wheel, front 219-220
Wheel, rear 271-273

Copyright of Honda TRX300/FOURTRAX 300 & TRX300FW/FOURTRAX 300 4x4, 1988-2000 is the property of Penton Media, Inc. ("Clymer") and its content may not be copied or emailed to multiple sites or posted to a listserv without the copyright holder's express written permission. However, users may print, download, or email articles for individual use.